

POWERFLEX®

PART NUMBER

PFR68-130

DESCRIPTION

REAR BEAM MOUNTING BUSH

INSTALLATION GUIDE

Contents (parts per pack):

2 x Polyurethane Bushes 1 x PTFE/Silicone Grease
1 x Stainless Steel Sleeves

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.

Fitting Instructions:

1. Remove the original bush from the rear beam including its outer shell.
2. Clean any dirt or burrs from the bore in the rear beam, removing any sharp edges with a rounded file.
3. Press one of the bush halves into the beam as shown in Figure 1.
4. Press the remaining half bush into the beam, ensuring that the two bushes interlock and are sitting flush against the beam tube.
5. Apply the supplied grease to the bore and mounting faces of each bush and press in the stainless-steel sleeve.
6. Refit the rear beam to the vehicle. Tension all hardware to the manufacturers recommended torque settings.

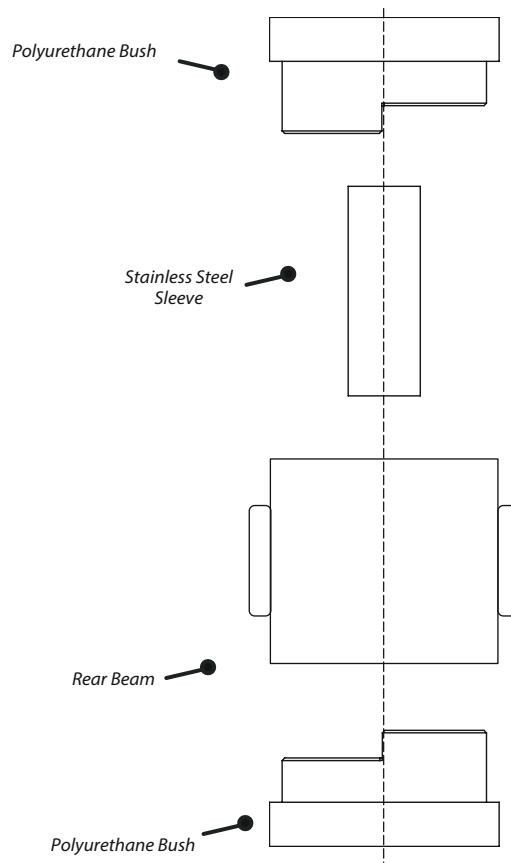


Figure 1

